


**SIZE**: 150\*145 CM **SIZE**: 170\*145 CM


#### TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start.make sure that you have the following tools to hand, plenty or space and a clean dry area for assembly.

Two people are needed. Please note: altough these instructions are comprehensive, We always recommend that a technically competent installer should undertake installation.



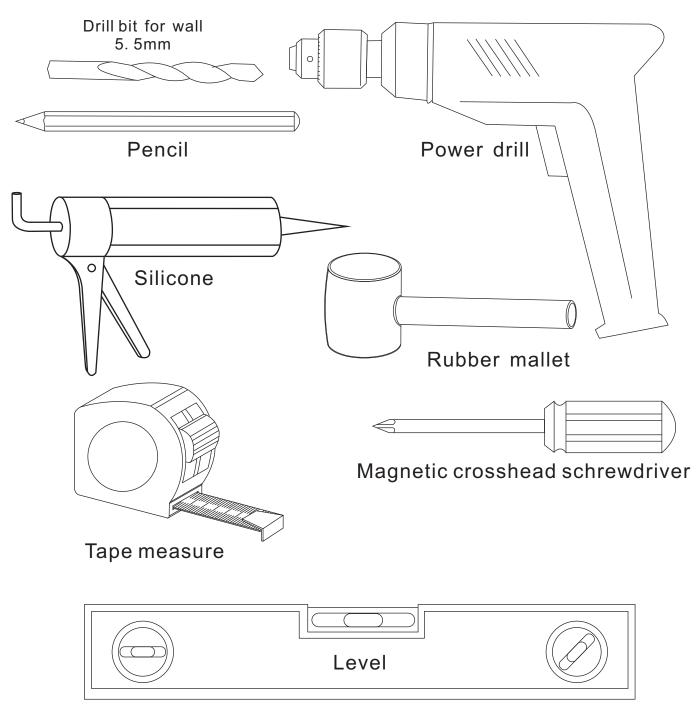


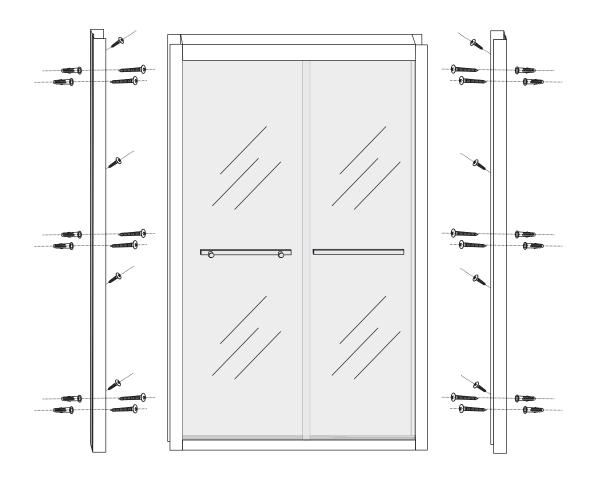



# Ref Description Qty A Bi-Fold door 1 B Wall profile 2


### Fitting kit includes

Ref	Description	Illustration	Qty
A2	Expendable wall plug	0 ====	14
B2	Stainless steel screws 4x25	(8) 111111111111111111111111111111111111	14
C2	Stainless steel screws 4x10	<b>Example</b>	10
D2	Handle	<u>P</u> P	2
E2	Drill bit 3mm		1

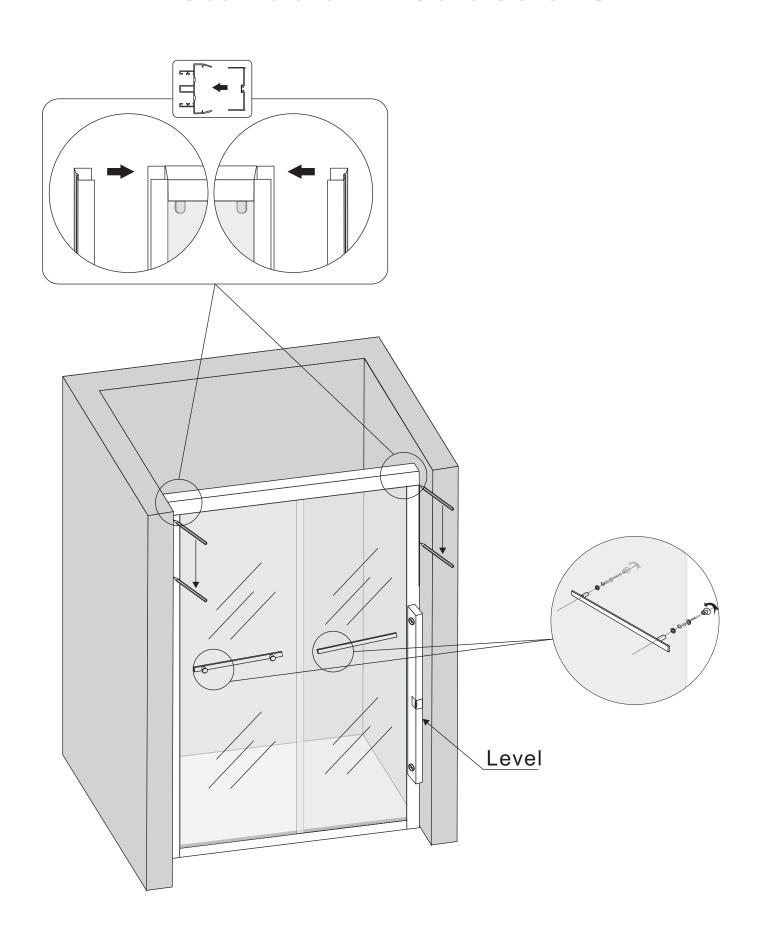

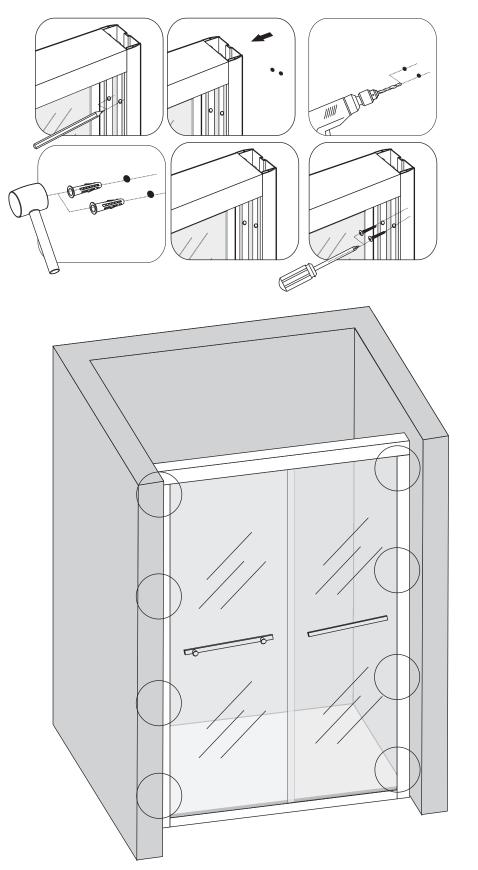

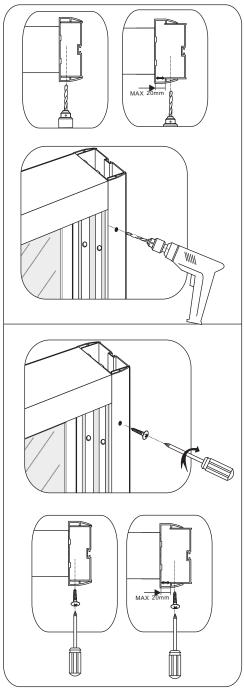

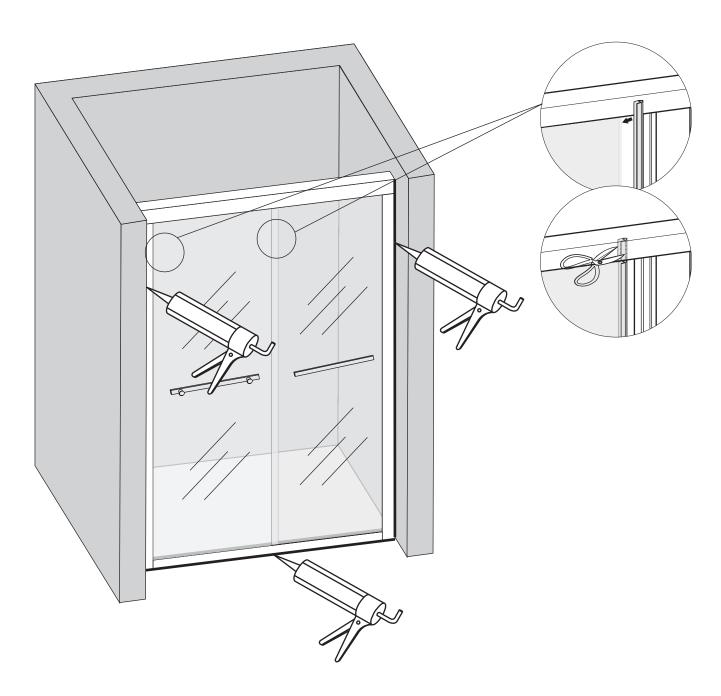

Apply Sanitary Silicone Only.as Shown Above To The Joints And Exterior Of The Cabin.do Not Apply Silicone Sealant To The Inside Of The Enclosure.