


# ODISSEY

## Installation Instructions

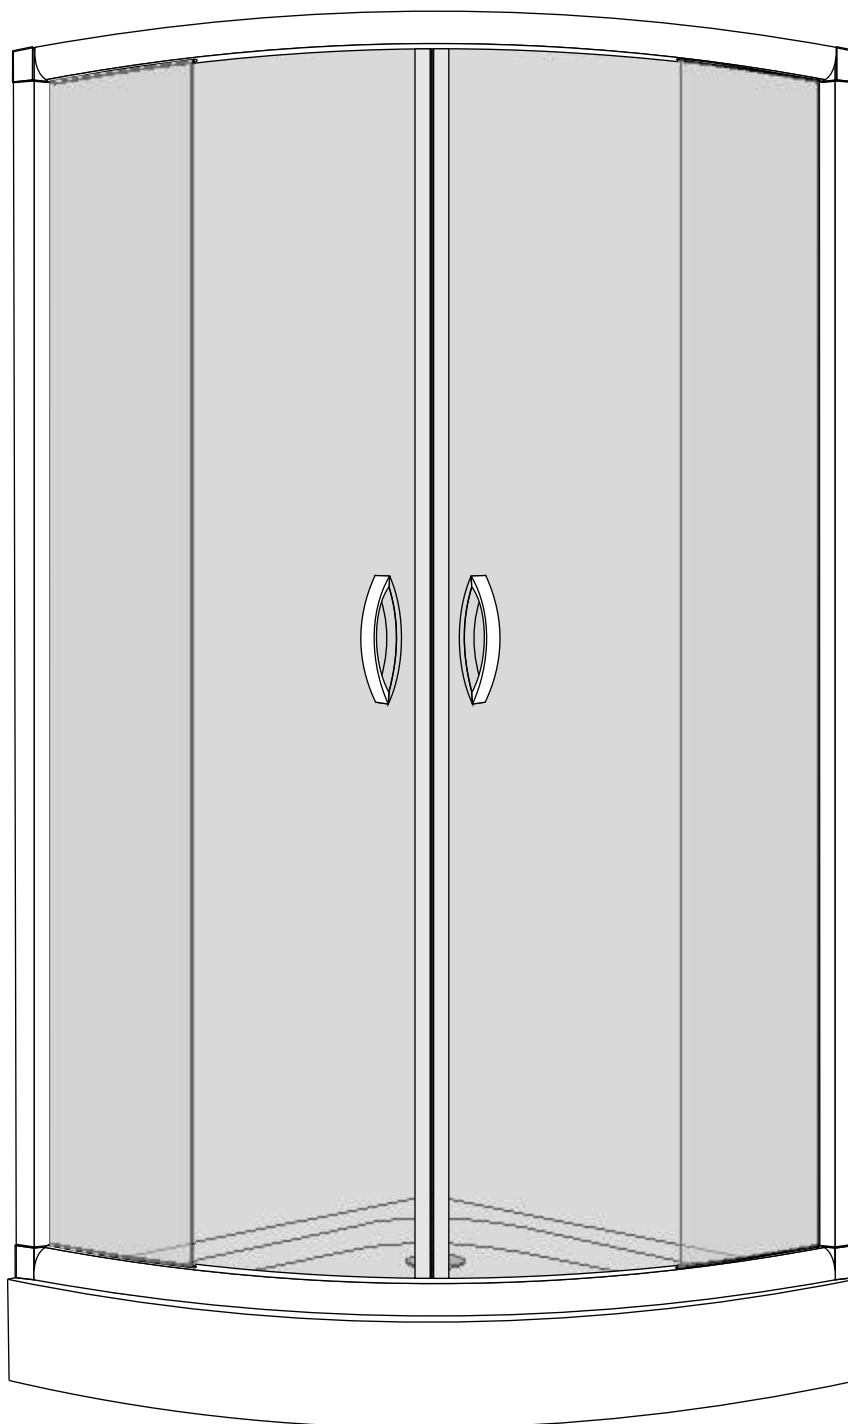


**SIZE :100\*100\*200CM**

# Installation Instructions


## TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start,make sure that you have the following tools to hand,plenty of space and a clean dry area for assembly.

Two people are needed. Please note:although these instructions are comprehensive,We always recommend that a technically competent installer should undertake installation.


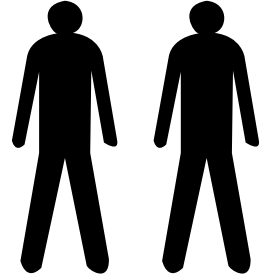


Drill beat head  
5.5mm

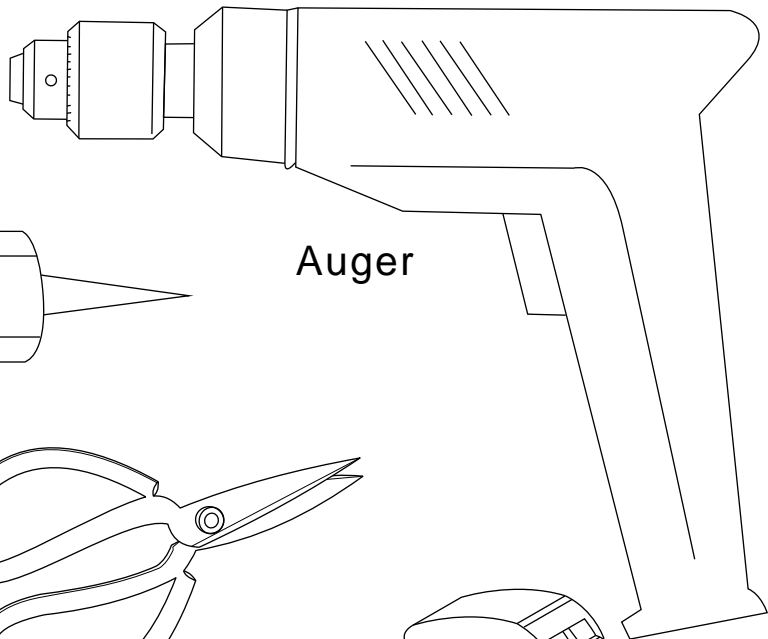


Auger


Sanitary Silicone

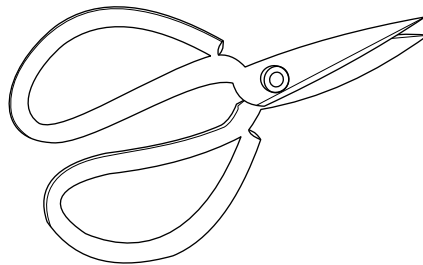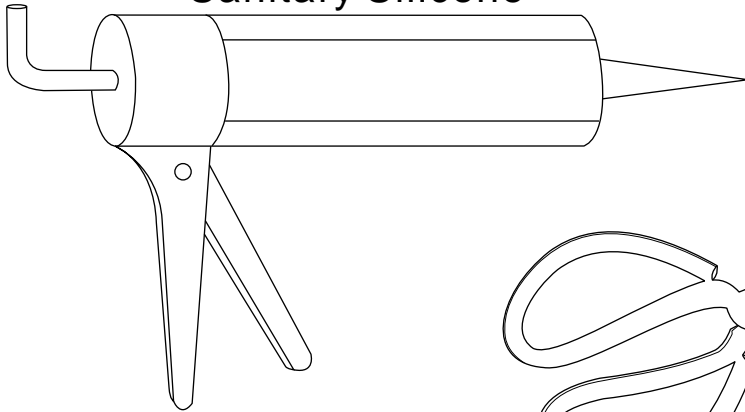


Forfex

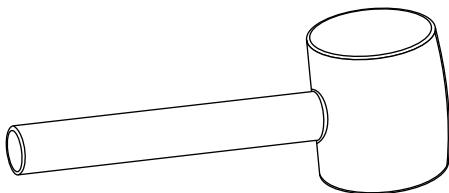


Hammer

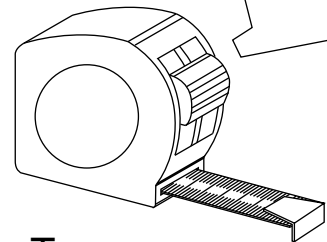


Tape measure



Pencil





Magnetic crosshead schrewdriver

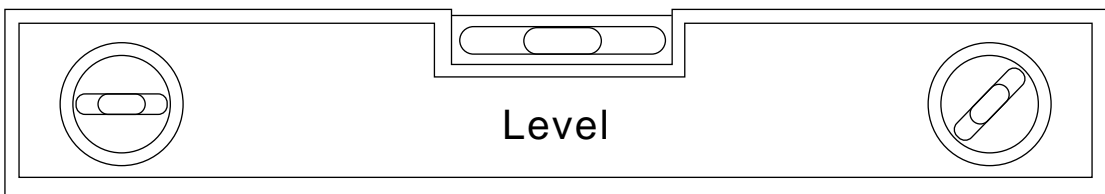


Level


# Installation Instructions

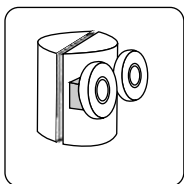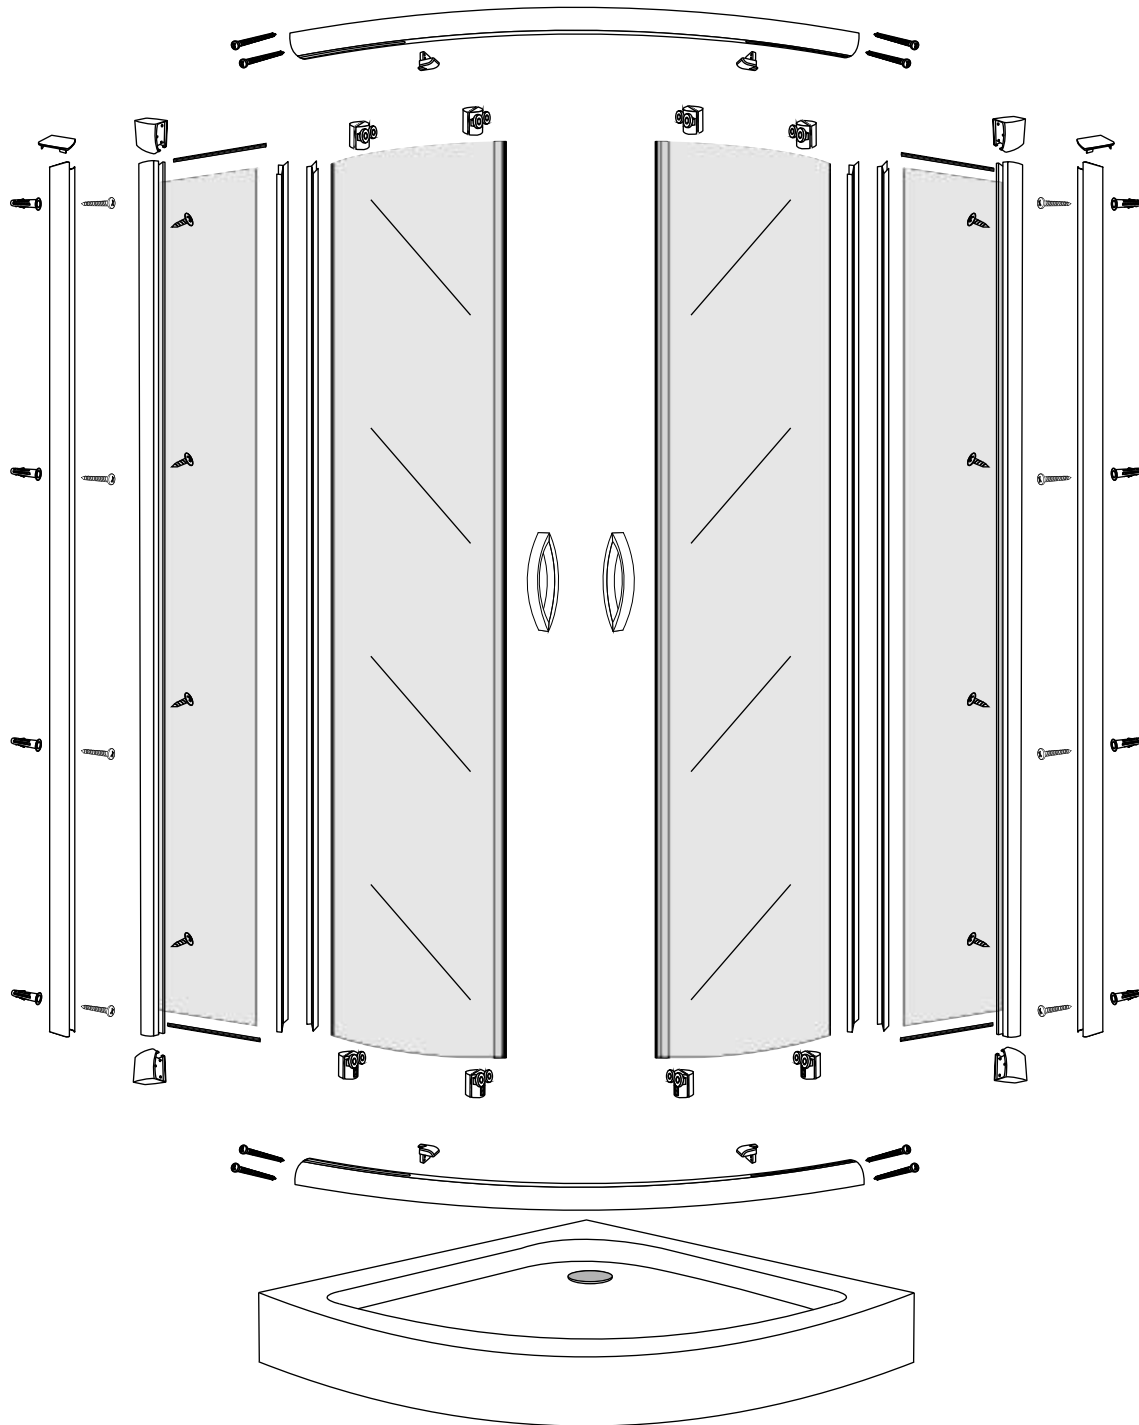


4PCS

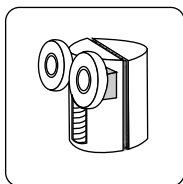


4PCS

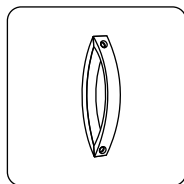


2PCS

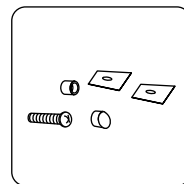


4PCS

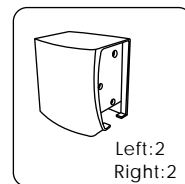


Left:2  
Right:2

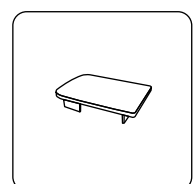


2PCS

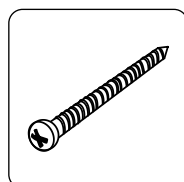


3.5x35mm  
8PCS

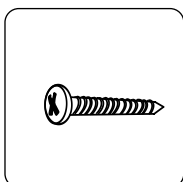

4x25mm  
8PCS

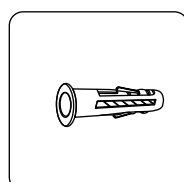


8PCS

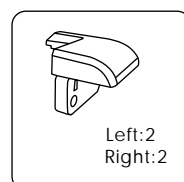


Left:2  
Right:2

4PCS

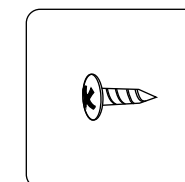




4x12mm  
8PCS

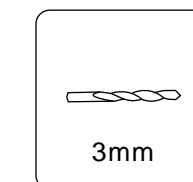

3mm



1PCS

# Installation Instructions

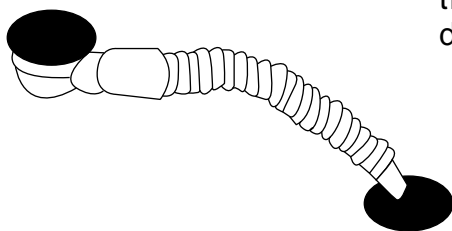
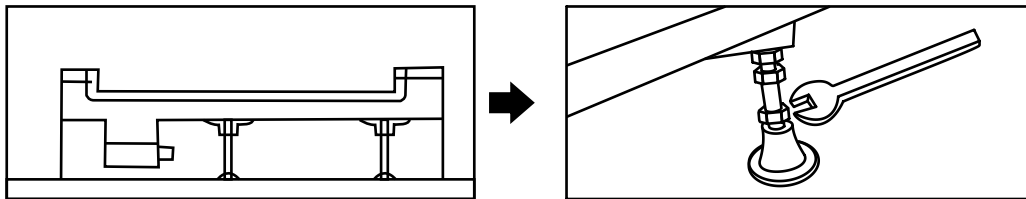
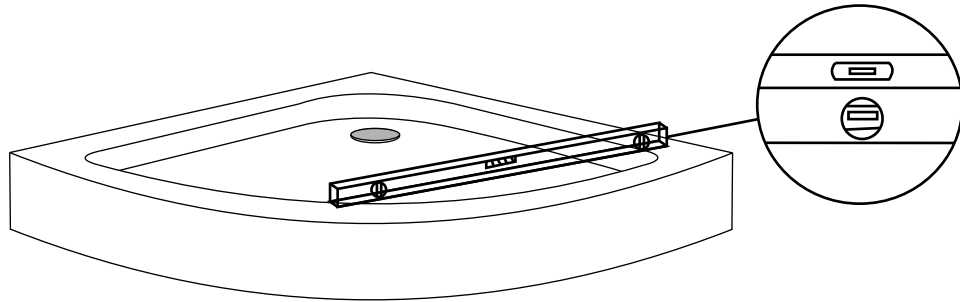


Lift the rear part of bottom basin , and then insert one end of the pipe into the drainage hole



# Installation Instructions

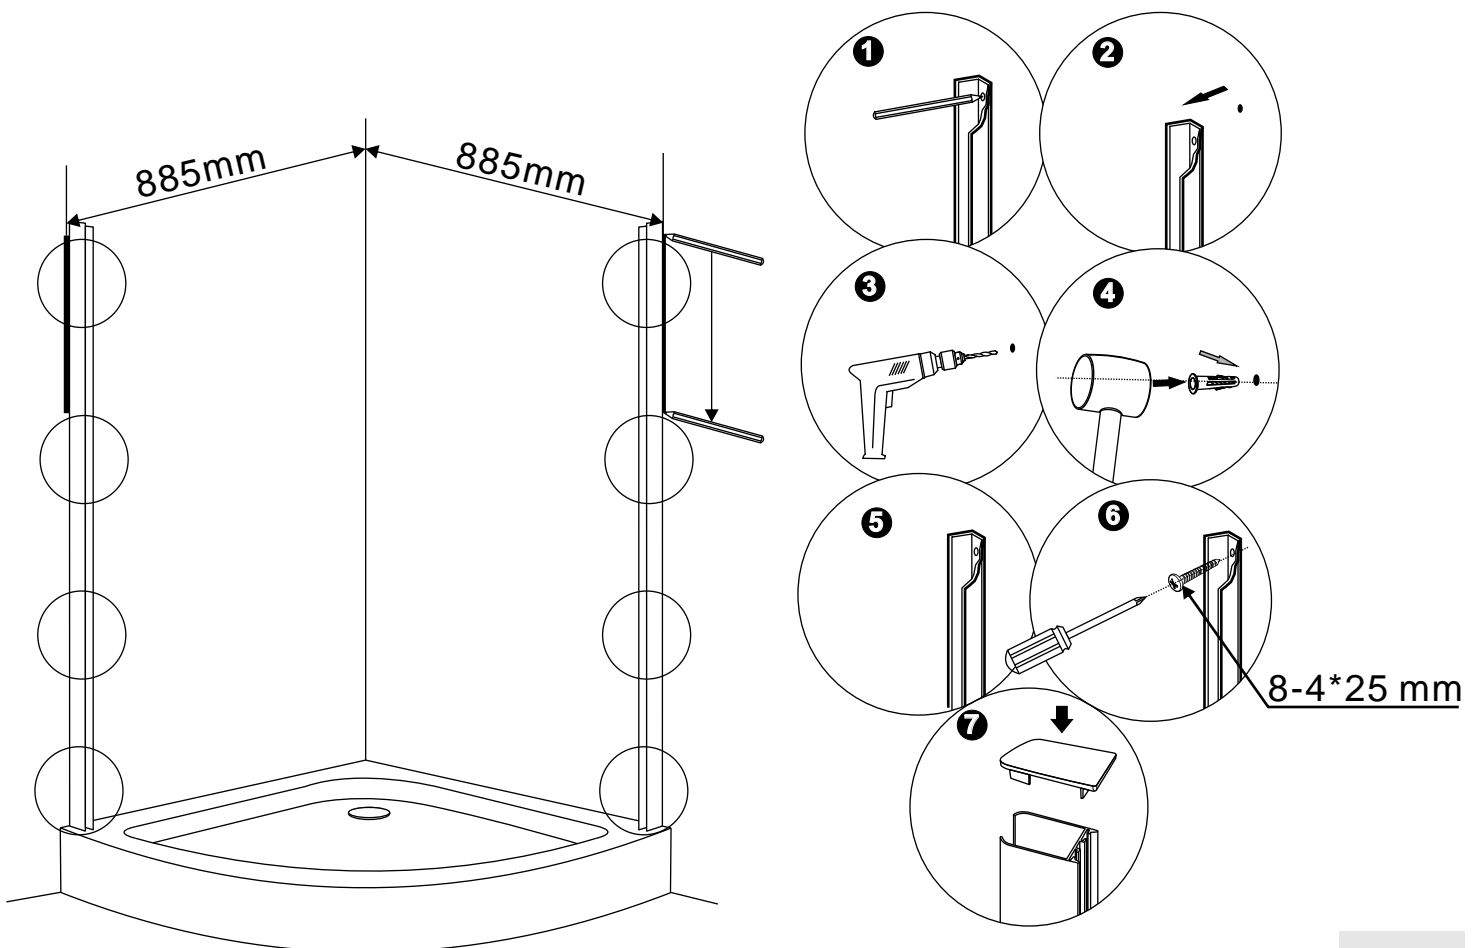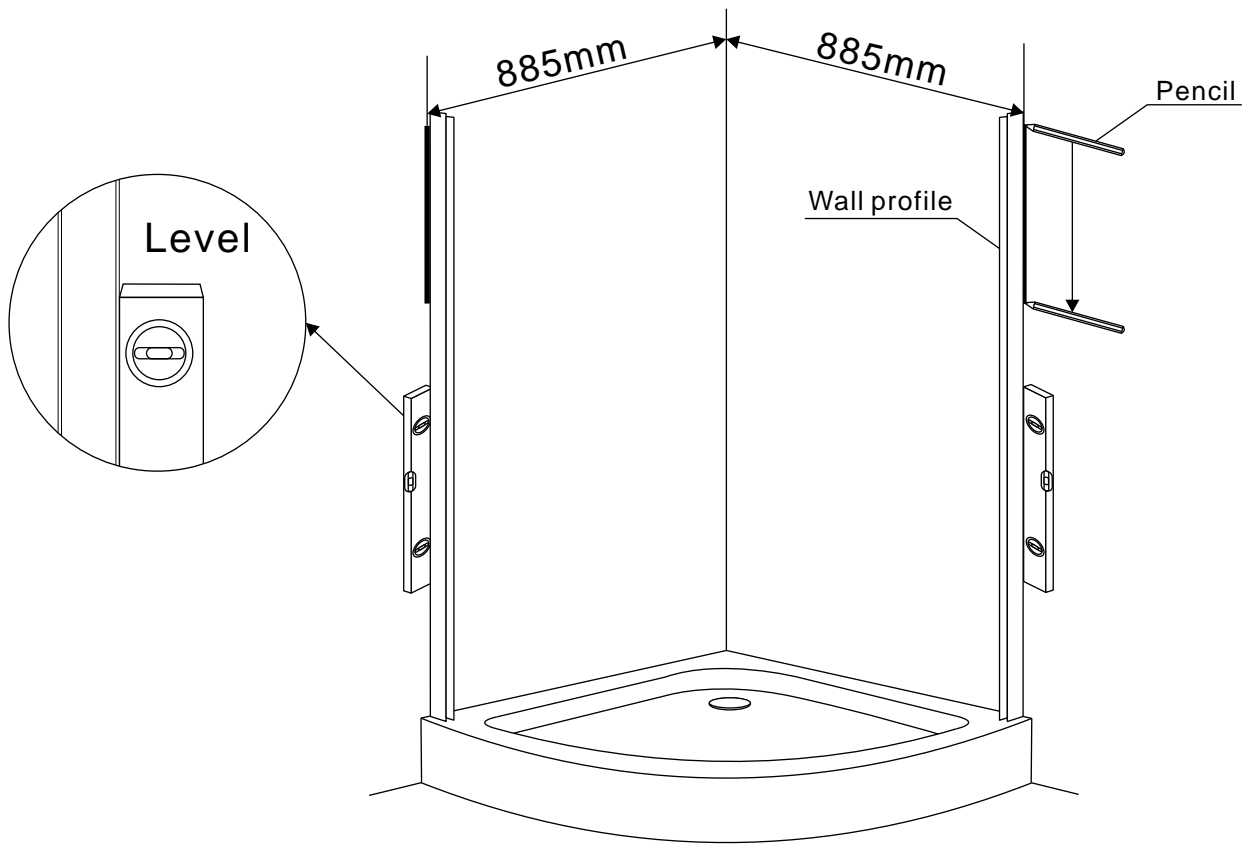




# Installation Instructions

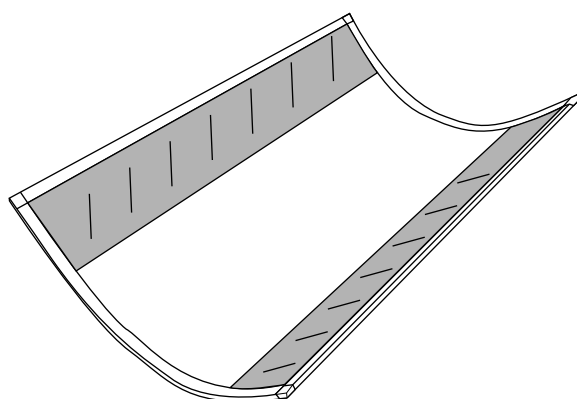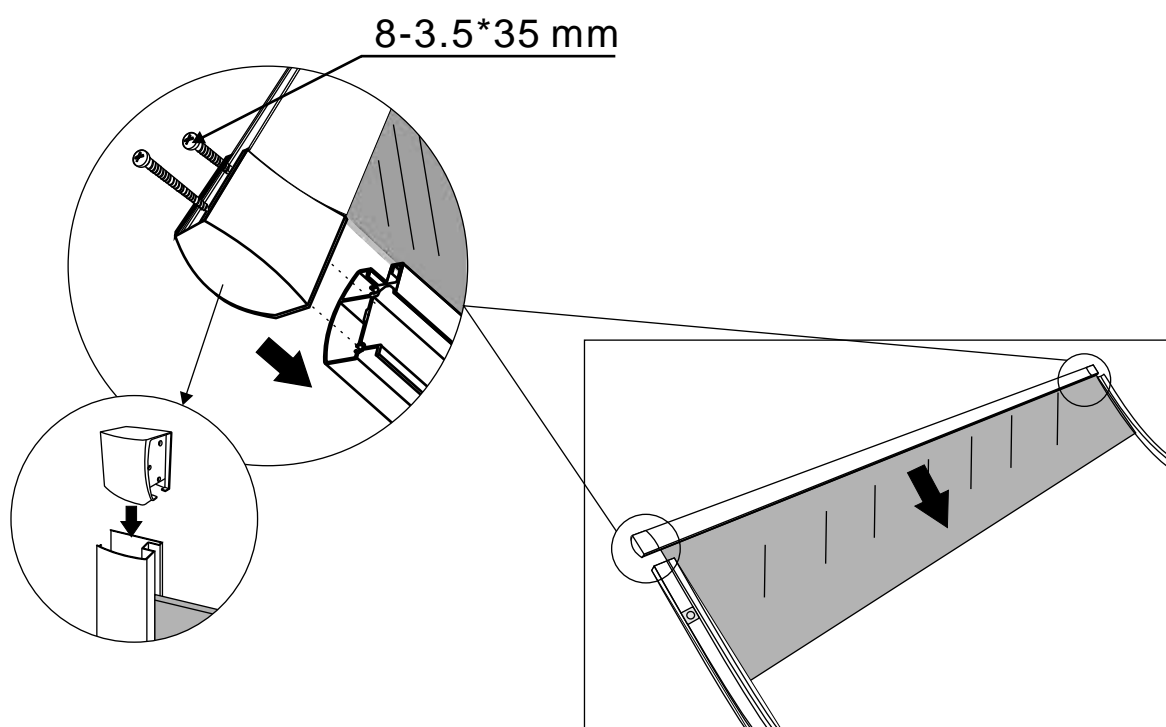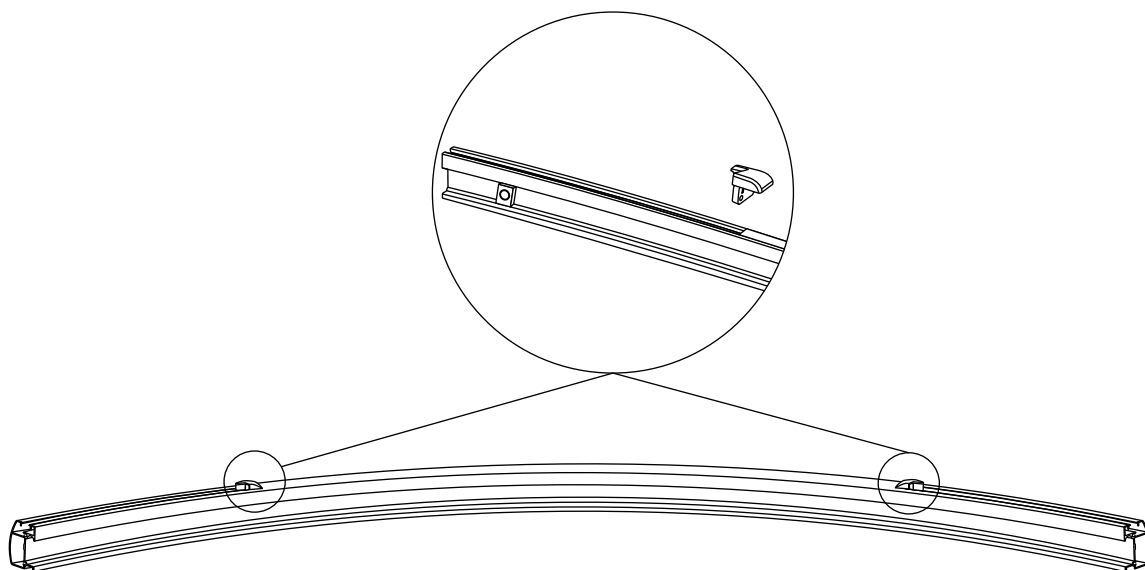

# Installation Instructions


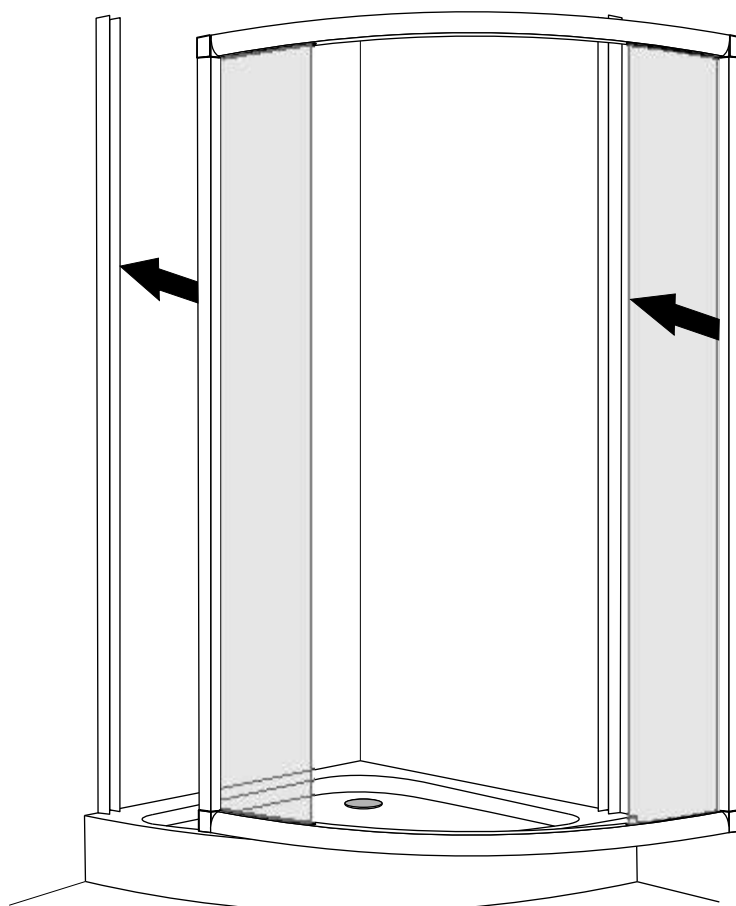
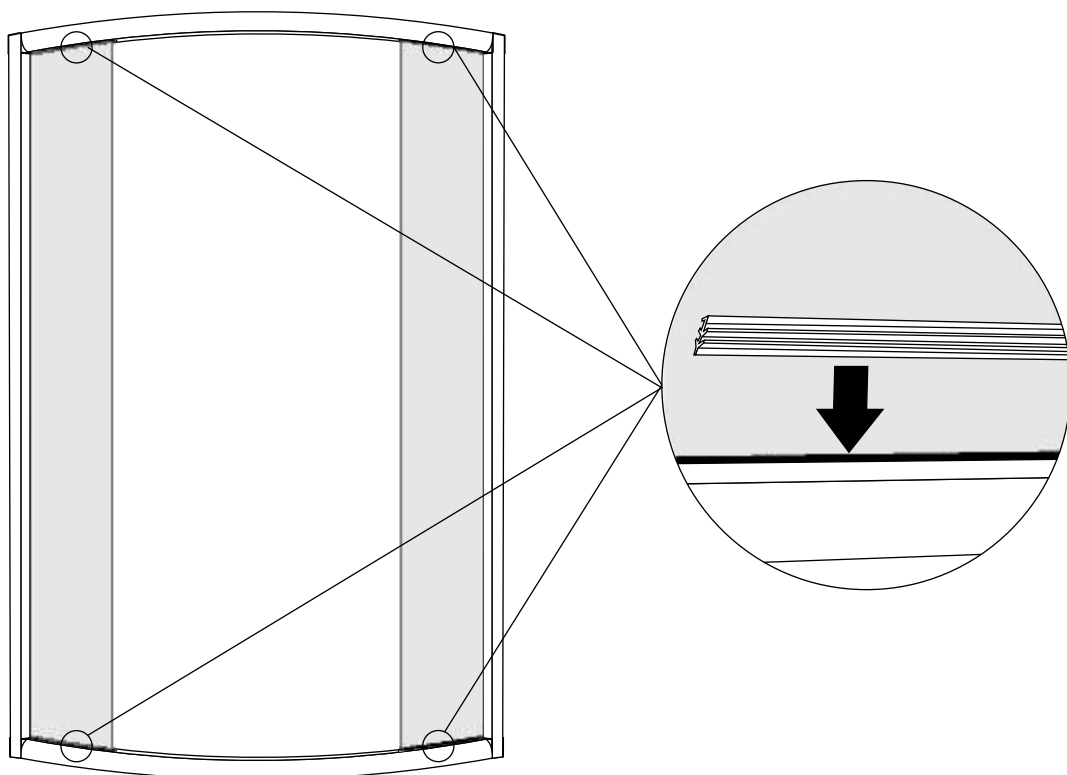


# Installation Instructions

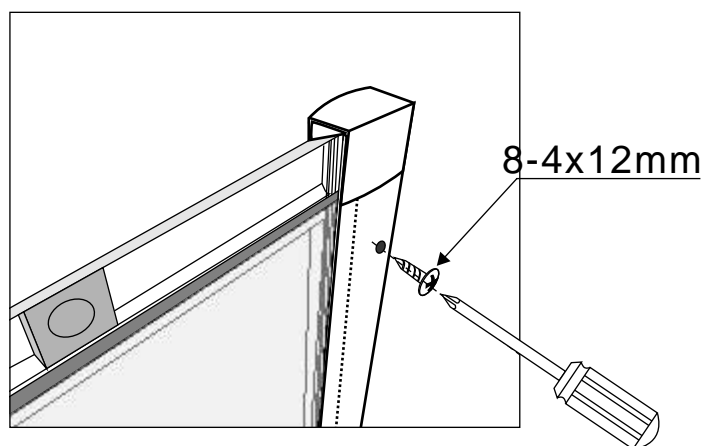
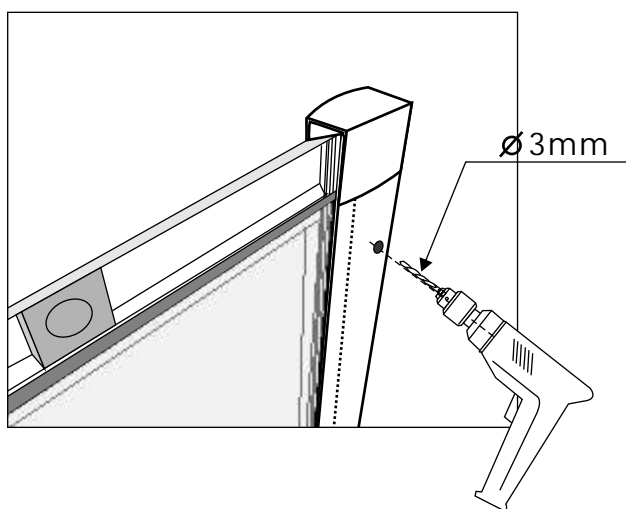
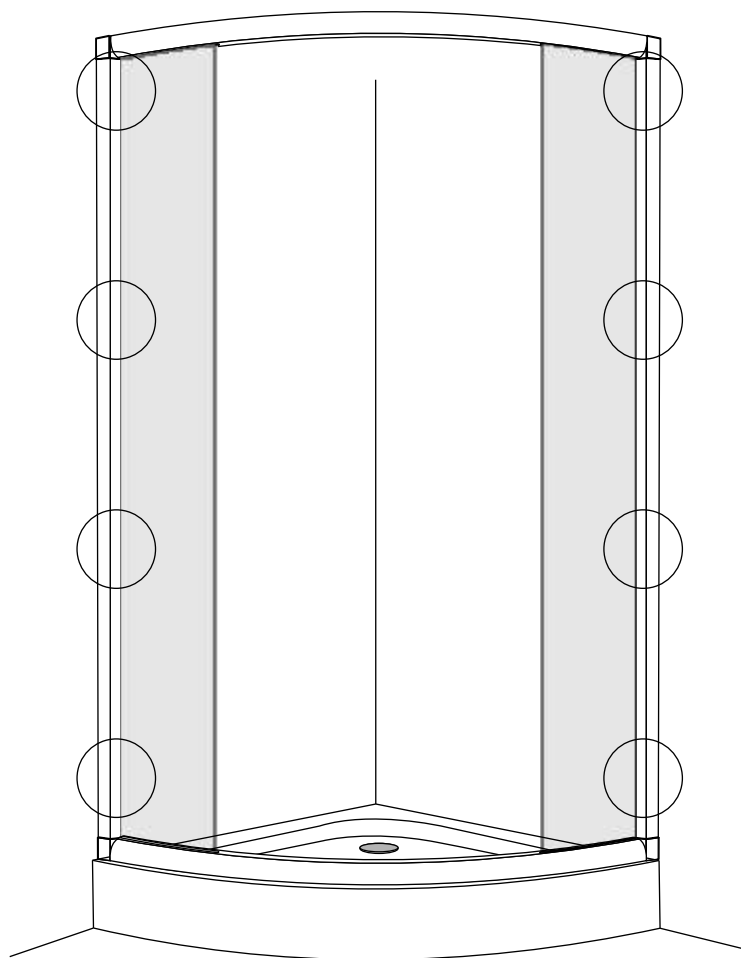





# Installation Instructions

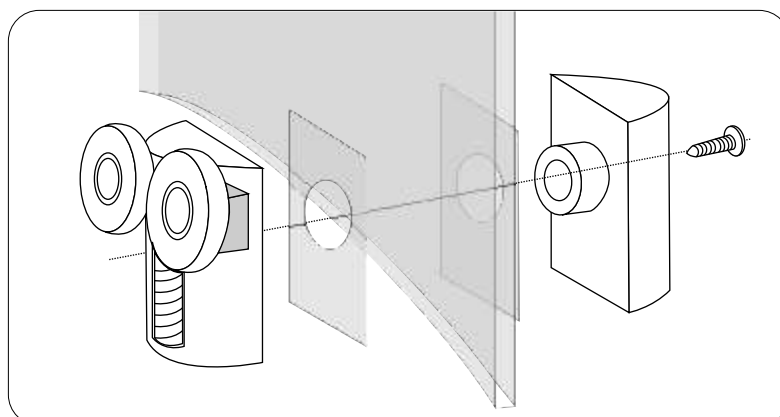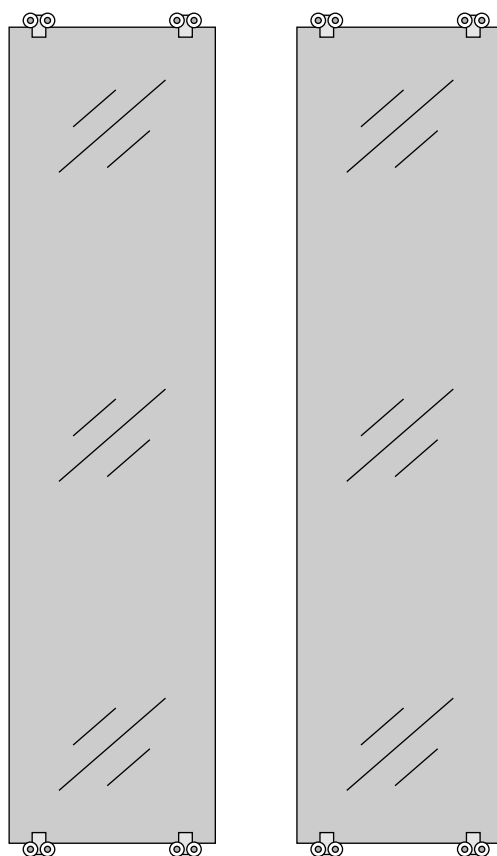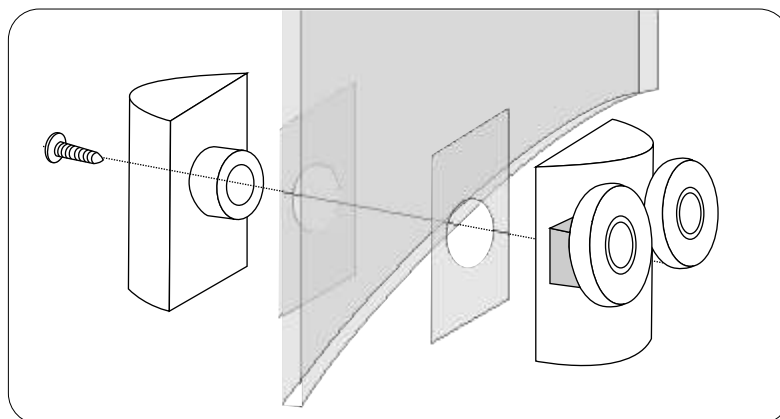

# Installation Instructions

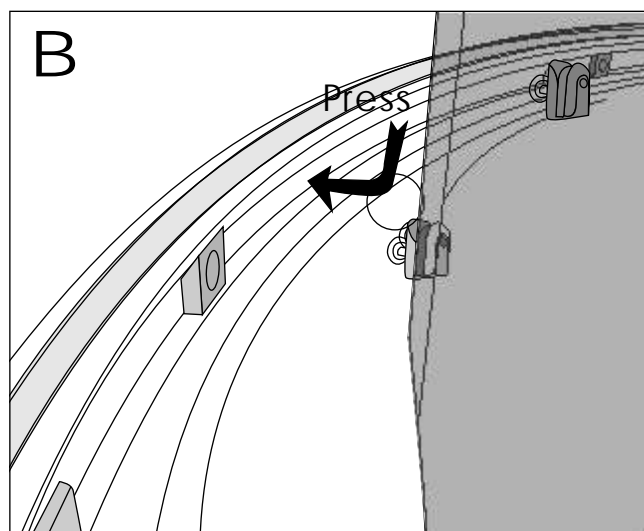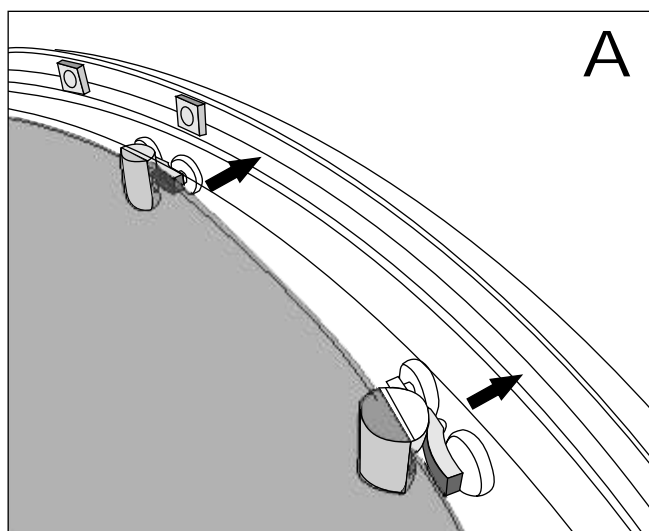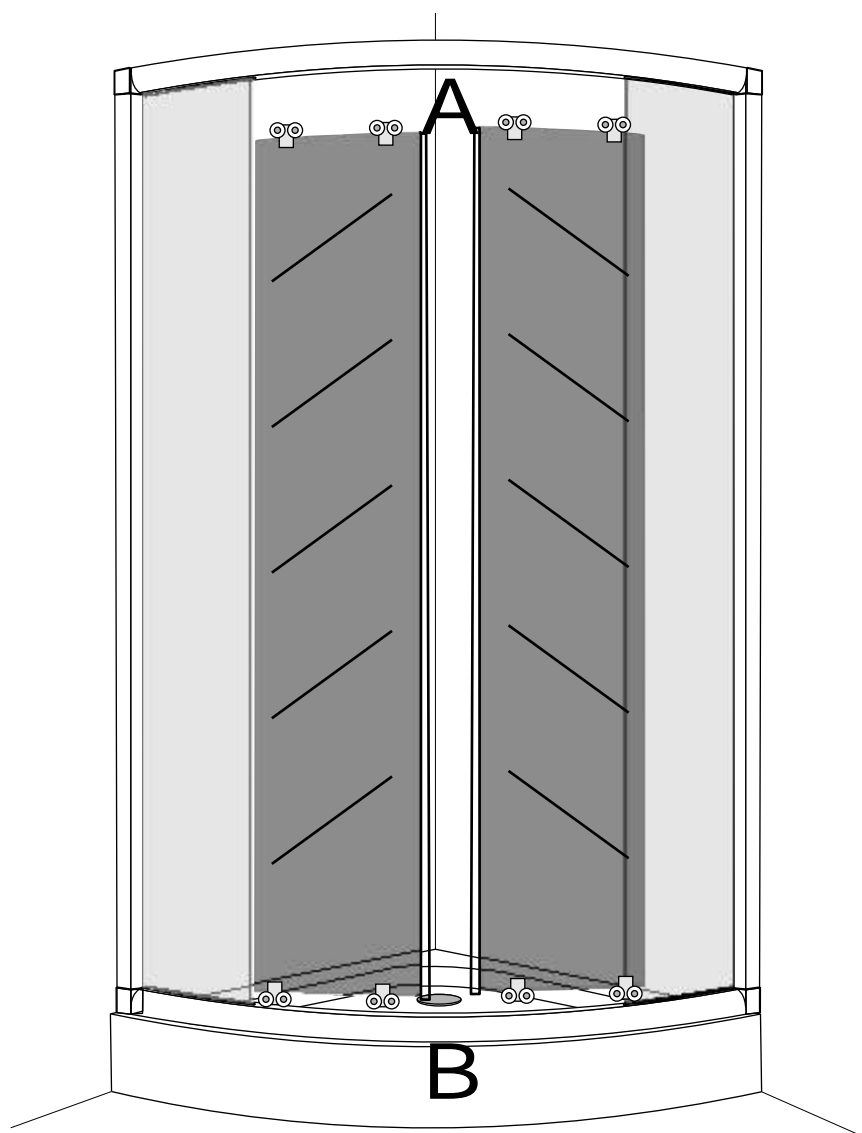

# Installation Instructions

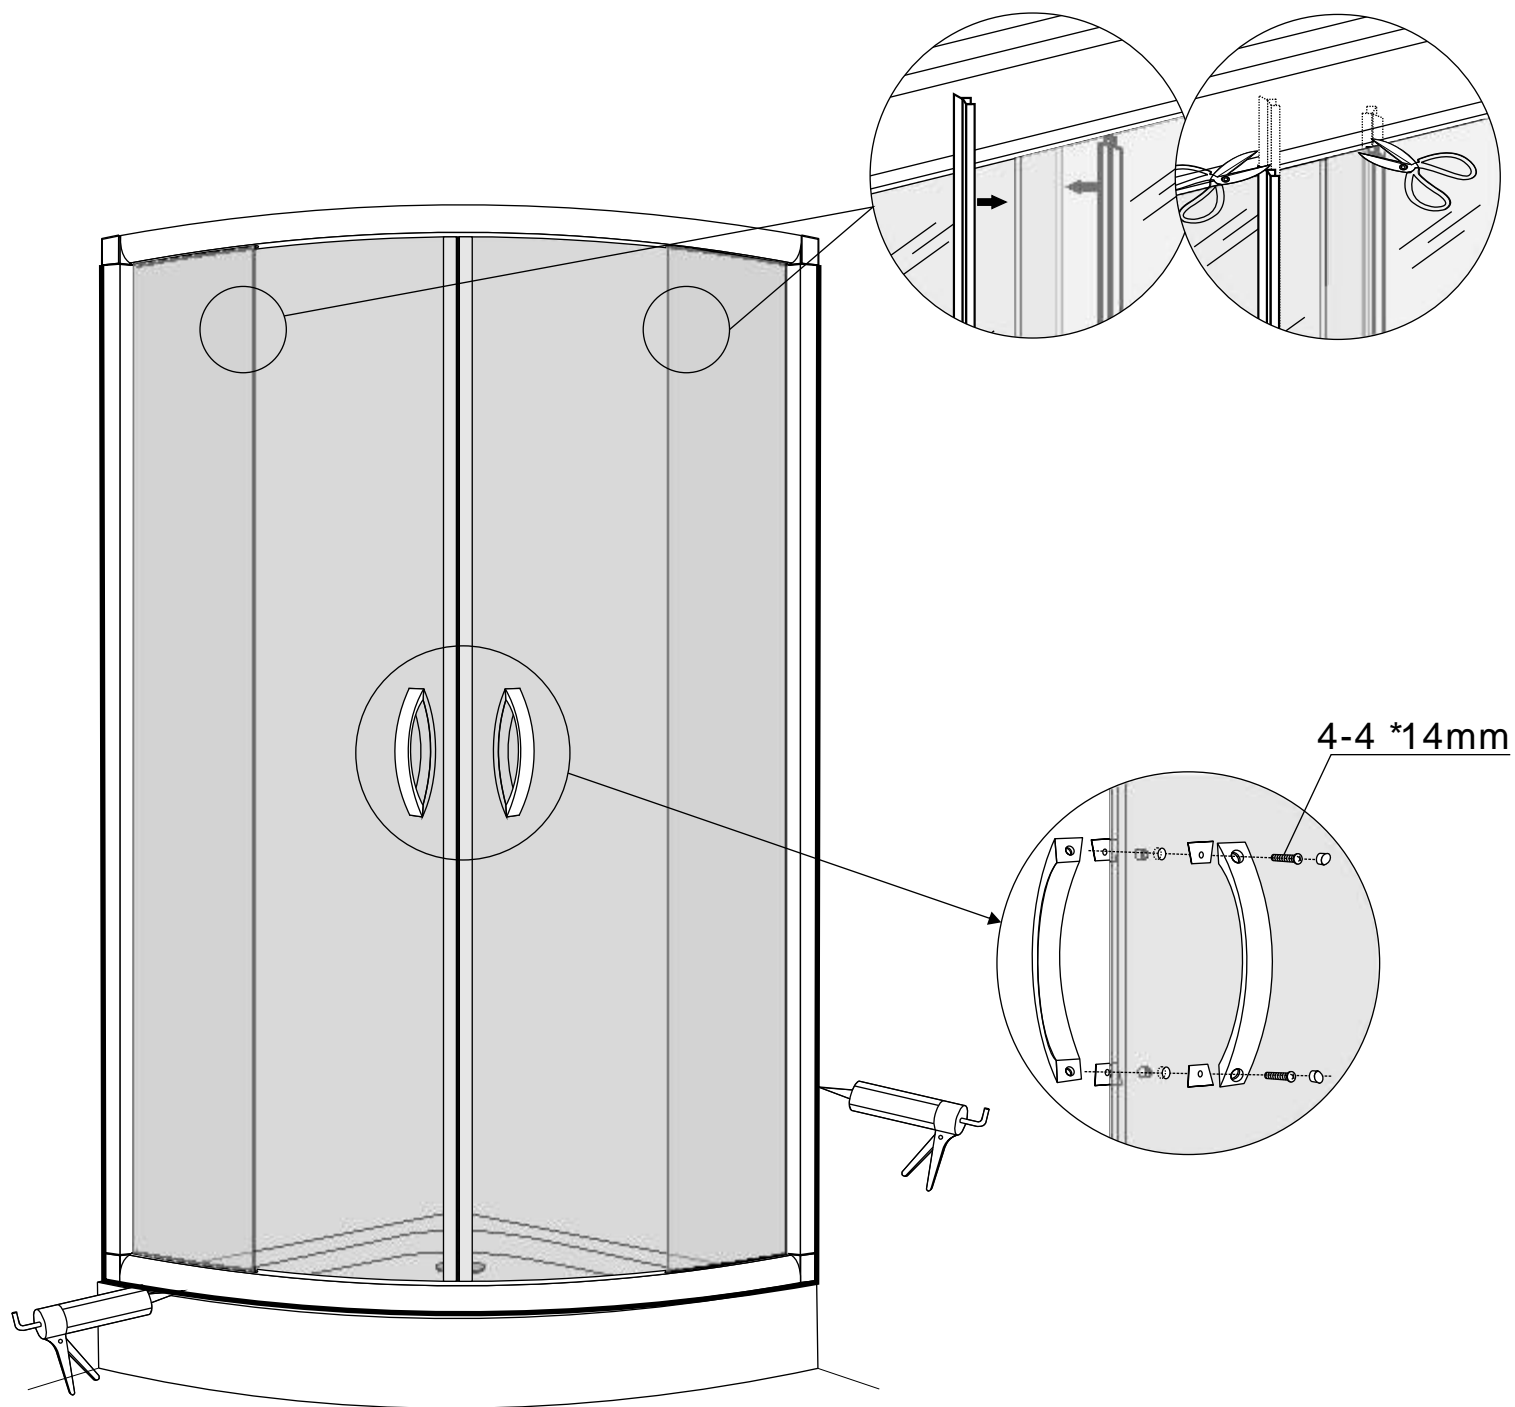

Warning: Don't use the shower enclosure until after at least 24 hours, so that the silica gel can be totally dry.